



Serial command of the HDMI input selection is accomplished using the RS232 (Mini-USB) connection located on the back of the unit.

Please note: serial commands are limited to HDMI input selection ONLY.

Function Name	Command	
Switch Channel	0x04 0x01 0x00(channel) 0x05	channel: 0x00~0x01
Get Information	0x03 0x00 0x03	0x06 0x06 0x03(Version) 0x0f(Version) 0x01(channel) 0x1f

Example:	0x03 0x00 0x03 0x03: Command Length 0x00: Command Type 1 0x03: Checksum	Check sum: the sum of all command (including command length) public byte CommandChecksum(byte[] command, int length) { byte checkcode = 0; int cnt; checkcode = command[0]; for (cnt = 1; cnt < length; cnt++) { checkcode = (byte)(checkcode + command[cnt]); } return checkcode; }
ACK	0x03 0x01 0x04 0x03: ACK Length 0x00: ACK Type 1 0x03: Checksum	ACK Type: 0x01 command ok 0x03 checksum error 0x05 command received 0x06 data feedback